


RCA VICTOR SPECIAL MODEL RECORD PLAYERS M & K

OPERATING INSTRUCTIONS

1. Make sure the main on/off/volume control on the left side of the machine is off.

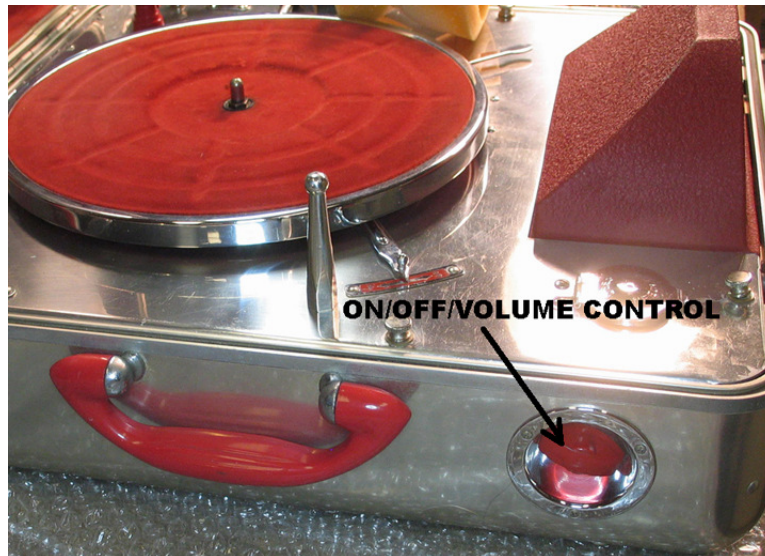

2. Install the battery, or batteries, depending on your model, and connect the battery wiring harness and connector(s) to the battery power supply. Check photos for your type of battery.




Single AB Battery with 4-pin Connector




45 volt x 2 B batteries + 1.5 volt A Battery, 3 connectors

3. Close the motorboard and snug down ALL the retaining screws so that the motorboard is flat. If the motorboard is not flat, the platter may scrape against the brake or speed control levers as it rotates.
4. Make sure the brake is set so that platter does not turn.

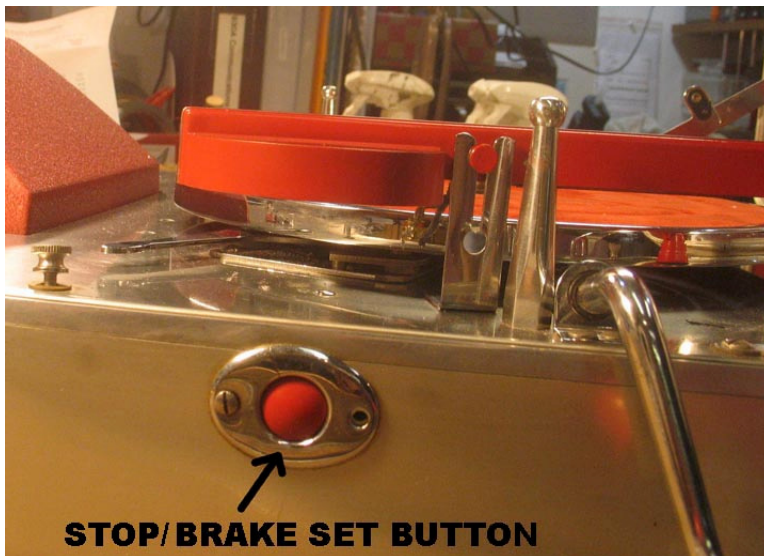


5. Your machine may be shipped from Edsantiqueradios.com with a new sapphire needle installed. This needle is good for about 80 - 100 hours of play.

When using steel needles in the cartridge, use a new needle for each record. Steel needles are only good for playing one record (both sides).

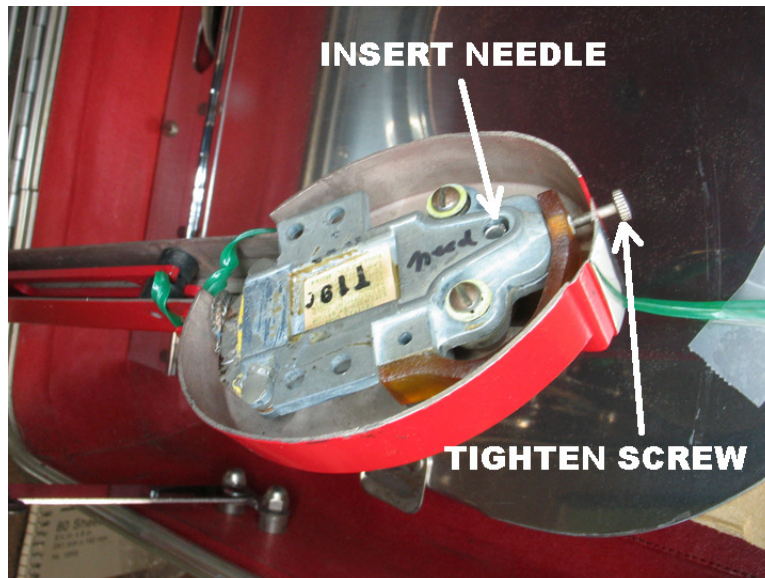


5. Screw the winding crank clockwise on to the motor arbor, and wind the motor gently. Resistance will increase as the springs are wound. Wind until the crank stops. Do not force. This may be 60 to 100 turns, depending on your motor. This is usually sufficient to play both sides of a 78 rpm record.
6. Turn on the main power switch and set the volume about halfway.
7. Place a record on the platter. Only shellac 78s should be played on your machine. Vinyl 78 records must be played on modern equipment.
8. Push the brake lever to the right to start the motor, which also turns on the amplifier tube filament circuit. It should only take a second or two for the amplifier to warm up.

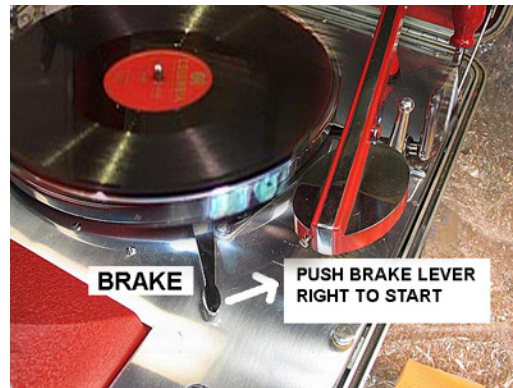

Lift the tone arm and carefully set it down on the record's lead-in groove.

9. If the speed is too fast or slow, adjust turntable speed.

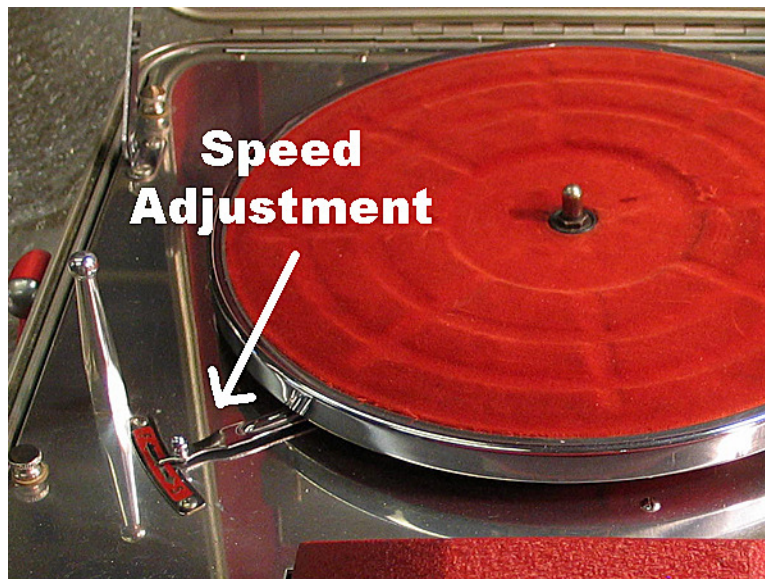

10. Adjust the volume as needed.

11. At the end of the record, push the button on the right side of the machine to set the brake. Return the tone arm to its perch. Repeat steps 7 - 10 to play the other side or another record.

12. When done using the machine, turn off main power and always let the motor run down. Do not store machine with the motor wound up. Remove batteries from the battery box when storing player for long periods of time. All batteries will leak.