


RCA VICTOR SPECIAL MODEL RECORD PLAYERS M & K

OPERATING INSTRUCTIONS

1. Make sure the main on/off/volume control on the left side of the machine is off.

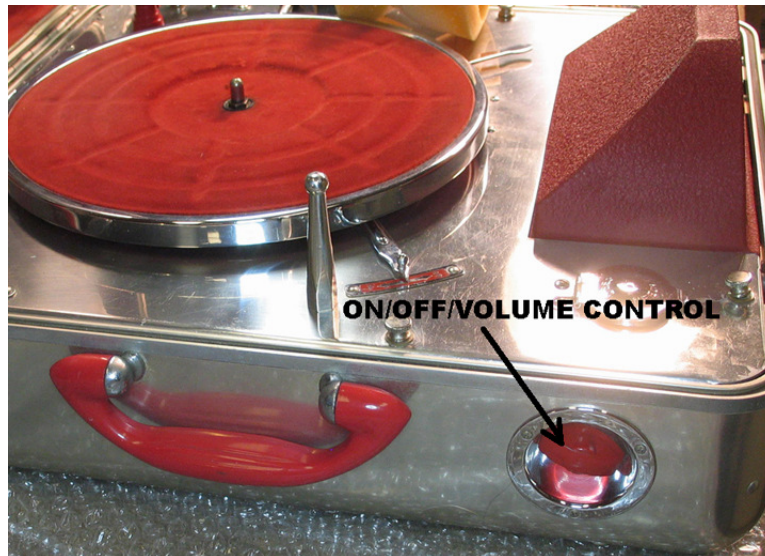


2. Install the battery, or batteries, depending on your model, and connect the battery wiring harness and connector(s) to the battery power supply.







3. Make sure the brake is set so that platter does not turn.

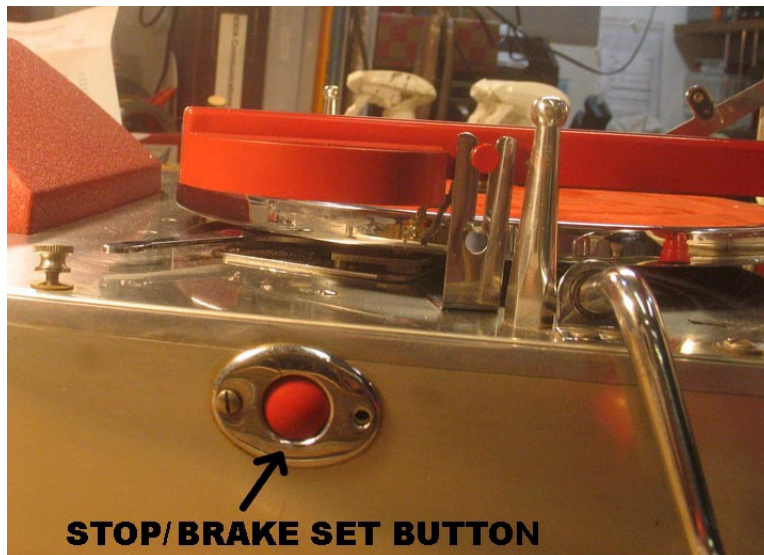

4. Install a new Victrola steel needle in the cartridge. Use a new needle for each record.

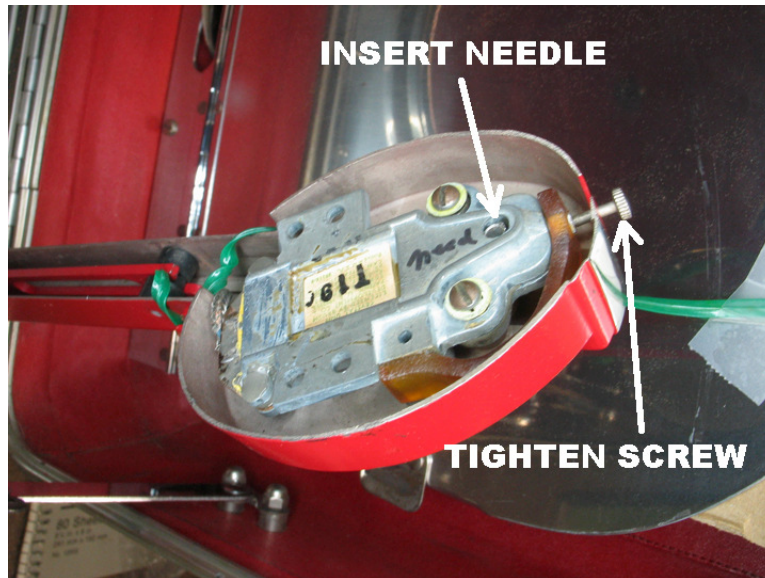

5. Insert the winding crank and wind the motor. A motor in good condition should take about 60 turns for a full wind. This is usually sufficient to play both sides of a 78 rpm record.
6. Turn on the main power switch and set the volume about halfway.
7. Place a record on the platter.
8. Push the brake lever up to start the motor. Lift the tone arm and carefully set down on the record's lead-in groove. It should only take a few seconds for the amplifier to warm up.

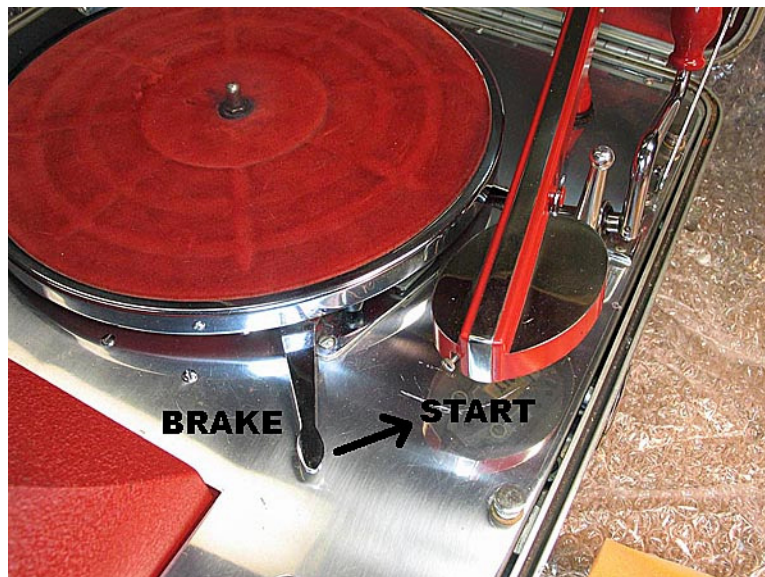

9. Adjust the volume as needed.
10. At the end of the record, carefully return the tone arm to its perch.
11. Push the button on the right side of the machine to set the brake. Repeat steps 7 - 10 to play the other side or another record.
12. When done using the machine, always let the motor run down. Do not store machine with the motor wound up.
13. Be sure to turn off the main power.
14. Remove batteries from the battery box when storing the player for long periods of time. All batteries will eventually leak.